



Apply as needed
in high wear areas

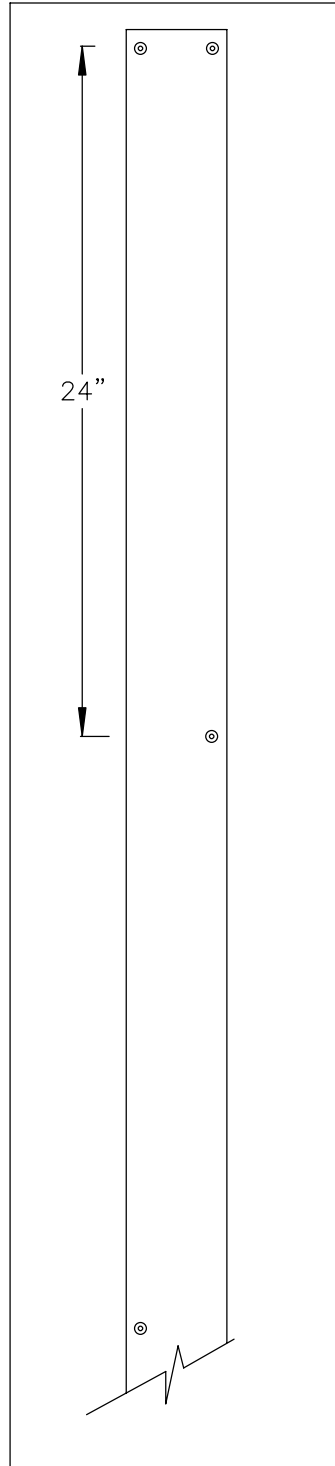

- 1) Drill & countersink PVC rub strip 1/2" from edge on 48" centers – alternating sides so there is a fastener every 24"
- 2) Use 5/32" drill for pilot holes in composite piles
- 3) Attach rub strip with #12 x 1" s.s. flat head screws

Note: Bottom of rub strip should extend at least 12" below low water mark
Lower 16" – 20" of rub strip may be left unattached.

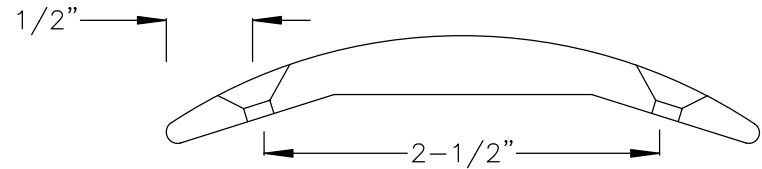

Nominal hole spacing



Optional Rub Strip Installation

Drawn By - PCM

Date - March 27, 2006